





Digital Rebel Camera

We will be using the Digital Rebel cameras for taking photos for this semester. These cameras will not be allowed to go home so you will have to use your cameras if you want to take photos at home and then use your flash drive to bring the images to school.

The purpose of this handout is to give you a basic concept to using the Digital Rebel cameras. You will be learning more about them in other lessons, but this is to give you a basic understanding. Below are some images of the cameras. They will have identifying letters and names of the various parts you will need to do the "Using the Camera" tutorial. Then there is also an explanation of each of the parts mentioned in this handout.

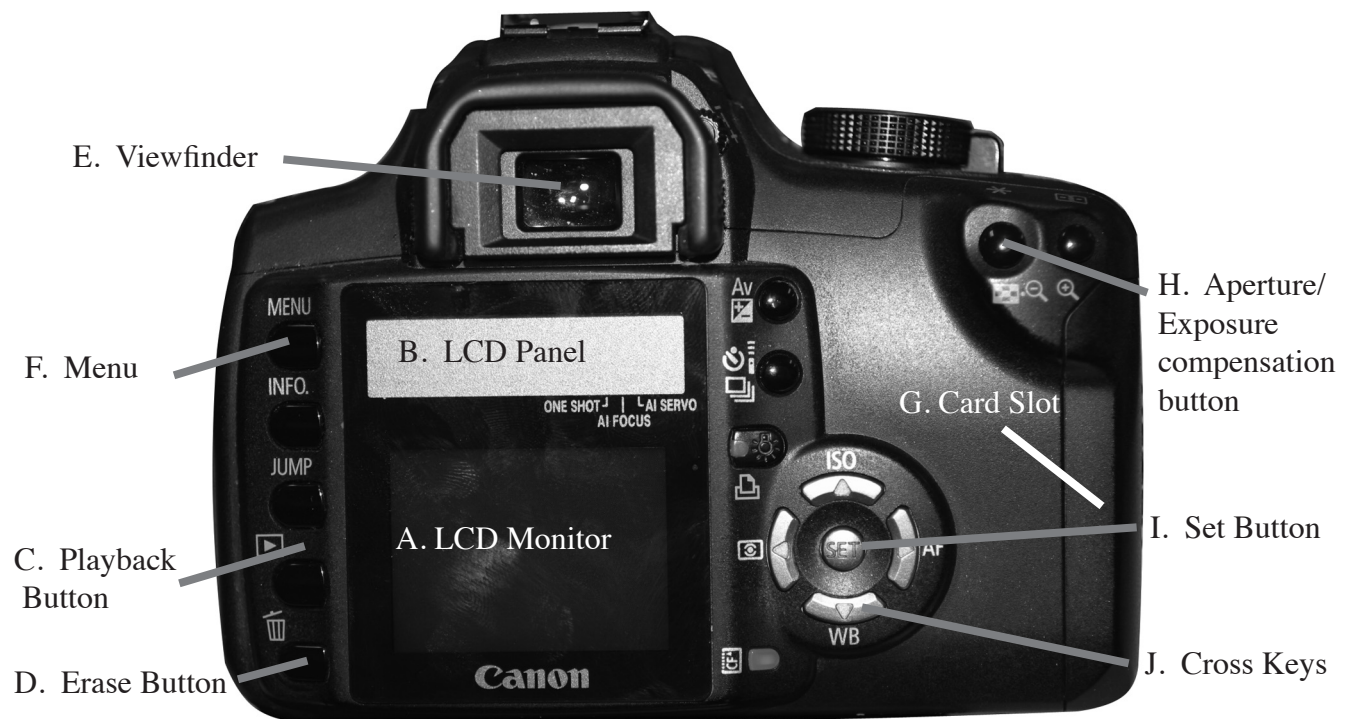

- A. **LCD Monitor**- This is where you will be able to view the scene that you just photographed. Also some of the Settings will be changed through this window.
- B. **LCD Panel**- Where information about what the camera is set to is seen.
- C. **Playback Button**- You will use this button to view your photos.
- D. **Erase Button**- You will use this button to erase any image seen in the LCD Monitor.
- E. **Viewfinder**- Where you look to see what your going to take a picture of.
- F. **Menu**- This button will allow you to see various settings to change in the LCD Monitor
- G. **Card Slot**- Where the CF card goes that has the images saved to.
- H. **Aperture/Exposure compensation button**- Button used to change the Aperture in Manual mode and adjust the amount of exposure for the automatic modes.
- I. **Set Button** - used to finish the adjustment of a setting.
- J. **Cross Keys**- used to move things in the LCD Monitor

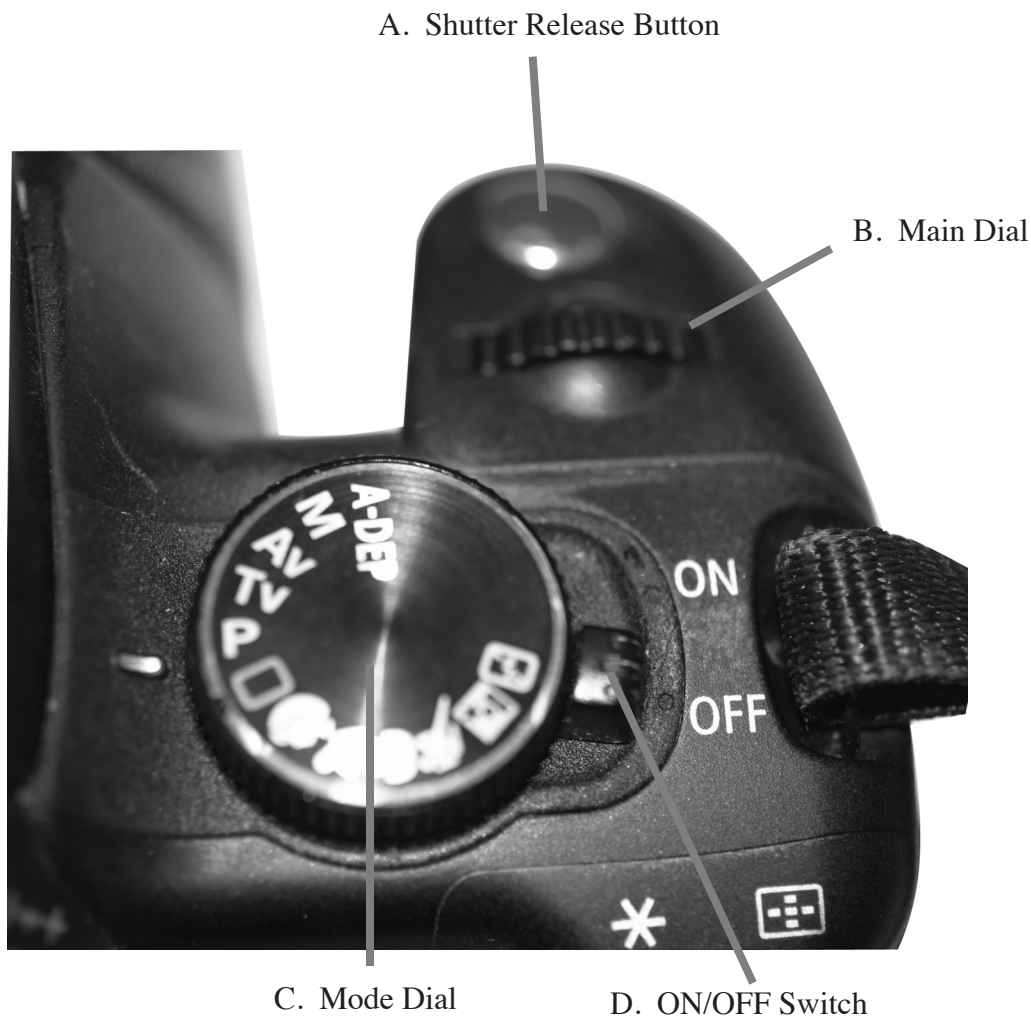

- A. Shutter Release Button**- Use this button to take the photo.
- B. Main Dial**- This is used to change shutter speeds and apertures seen in the "LCD Panel"
- C. Mode Dial**- This is used to change the various modes for shooting. The following is an explanation for each shooting mode.
- P- Program mode**...The camera will set both Shutter Speeds and Aperture to get the correct exposure for the available light.
 - Tv- Time value mode**...The user is able to set the Shutter Speed to one he wants by using the Main Dial and seeing the setting on the "LCD Panel". Useful when taking photos of things moving.
 - Av- Aperture value Mode**...User sets the Aperture and the camera will set the Shutter Speed to the correct one for the available light. Useful when the user wants to adjust the amount of Depth of Field in the photo. (More about this later.)
 - M- Manual mode**...In this mode the User sets both Shutter Speed and Aperture. The camera will tell you when you have the correct combination in the viewfinder of the camera.
- D. ON/OFF switch**- Turns the camera on or off. Camera will turn self off after a few minutes of non use. Push the "Shutter Release Button" slightly to turn back on if "On/OFF Switch" is already on.